

# Quick-Start Guide

## OutletLinc™ - INSTEON® Remote Control Outlet

Models: 2473S (2473SWH, 2473SAL, 2473SBK, 2473SIV)



### Introduction


The INSTEON Remote Control Outlet is a dual Decora-style outlet with INSTEON on/off remote control of the top receptacle. Additionally, the top receptacle can be controlled locally, by tapping the button.

### Tools Needed

- Phillips and Standard screwdrivers
- Wire cutter / stripper
- Voltage tester to identify wires inside the junction box



OutletLinc  
INSTEON Remote Control  
Outlet

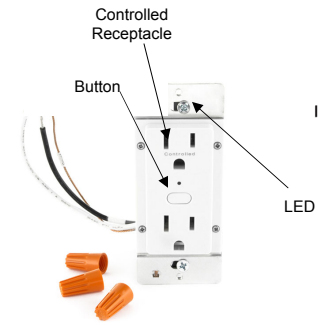

### Installation

**Important:** Installation should be performed only by a qualified electrician or by a homeowner who is familiar and comfortable with electrical circuitry. If there are any questions, consult an electrician. For setup questions contact Tech Support at SmartLabs for guidance. Two or more properly installed INSTEON Access Points are strongly recommended for every home. You will need to ID all your wires before beginning.

- 1) At the circuit breaker, disable the circuit supplying power to the switch
- 2) Remove existing outlet and trim plate
- 3) Twist together OutletLinc's bare copper GROUND wire to GROUND, with included wire nut
- 4) Twist together OutletLinc's white wire to NEUTRAL (usually white), with included wire nut
- 5) Twist together OutletLinc's black wire to HOT, with included wire nut
- 6) Carefully install OutletLinc into electrical box and replace trim plate
- 7) Reconnect power at the circuit breaker panel
- 8) Confirm that LED is on and tap the button a few times

*OutletLinc will click each time you turn it on and off*

### Setup to Control OutletLinc from an INSTEON Controller

- 1) Identify your Controller type from the list below and perform the appropriate steps listed:



Press & hold the desired button (for about 10 seconds) until its LEDs begin blinking  
*LEDs will continue blinking*



Press & hold the On button of the desired button pair (for about 10 seconds) until it beeps  
*LED will begin blinking*



Press & hold the top paddle until LED begins blinking  
*LED will continue blinking*

**If your Controller is not shown – consult its Owner's Manual**

- 2) Press & hold the button on the OutletLinc until its LED blinks  
*LEDs on your Controller will stop blinking*
- 3) Test by turning your OutletLinc on and off from your Controller

### Automatically Turning Receptacle On When Connected Device is Switched On

Enable this feature to allow the turning on of a plugged-in device even if the Controlled Receptacle is in the off mode. This is referred to as "Load Sense". The default, factory setting for this feature is off.

#### To Enable Load Sense

- 1) Press & hold the button until its LED begins blinking  
*LED will begin blinking*
- 2) Tap the button three times quickly  
*LED will return to steady on*

#### To Disable Load Sense

- 1) Press & hold the button until its LED begins blinking  
*LED will begin blinking*
- 2) Tap the button twice  
*LED will return to steady on*

#### Important Safety Note:

With Load Sensing enabled, some devices have been known to falsely turn the OutletLinc back on after it was turned off. Please use this feature with caution.

### Complete Instructions, Troubleshooting, and Tech Support

**Owner's Manual:** [http://wiki.smarthome.com/index.php?title=2473S\\_Manual](http://wiki.smarthome.com/index.php?title=2473S_Manual)

**Call:** Tech. Support @ 1-800-SMARTHOME (800-762-7846)

**Contact Us Online:** <http://www.smarthome.com/contactus.html>