



### CONTROLLER

In enclosure **20A00-2**  
On mounting plate **20A00-8**



### CONTROLLER

In enclosure **20A00-50**  
On mounting plate **20A00-52**



### AUDIO

Omni Console w/ Spkr/Mic **33A00-4**  
Surface Speaker/Mic **28A00-1**  
Flush Speaker/Mic **28A00-2**  
Two Way Voice Module **10A11-1**

### SERIAL PORTS

HAI Lighting Control  
Serial to PC cable **21A05-2**  
Serial Connectivity Cable **36A05-4**  
Russound or Nuvo  
Audio System (Pro II only)


### EXPANSION

Zone Expander **10A06-1**  
Serial Board **10A17-1**  
ALC Lighting

### ETHERNET PORT

See HAI software Options

2 way X-10 Interface Kit **10A09-7**

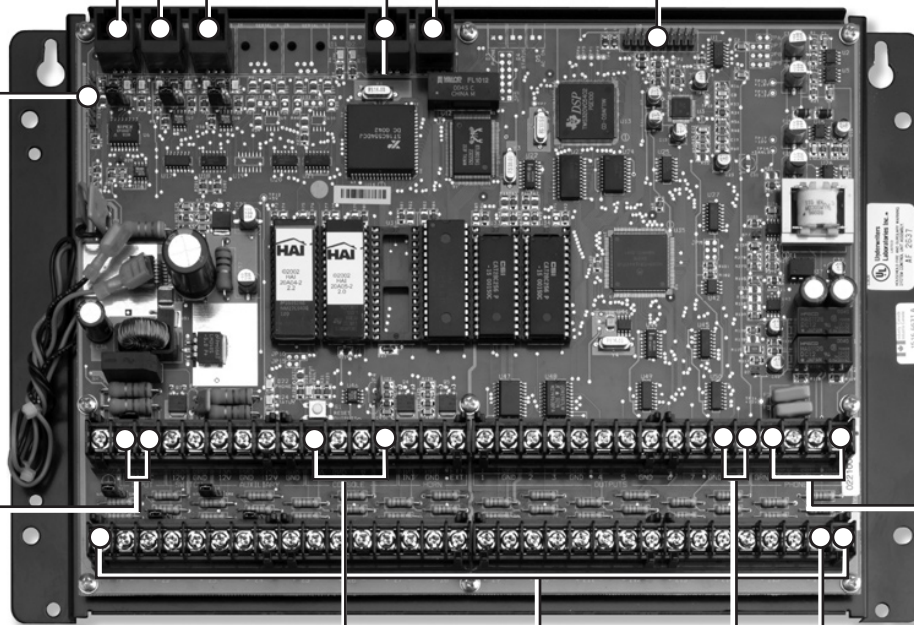

### TRANSFORMER

24V, 40 VA  
(12V Battery)



### USER INTERFACE

OmniTouch  
Screens & Consoles

### EXPANSION

HAI Wireless **45A00-1**  
Wireless Receiver **42A00-1**  
Expansion Enclosure (Pro II only)

### SECURITY & ENERGY MANAGEMENT

Temperature Sensor **31A00-7**  
Temperature/Humidity Sensor **31A00-8**  
Standard Security/Fire/Environmental Sensors



### TELEPHONE INTERFACE

PC Access  
Telephone



### COMFORT & CONVENIENCE

HAI Omnistat Thermostats